

countdown setting



countdown :

> **press briefly** on the pusher :
by successive pressure set
the countdown on the desired
minute.

chronograph :

> if you set the countdown
on 0 : your instrument is
working like a chronograph
and is adding the time until
99 hours, 59 minutes and
59 seconds.

Setting of the countdown from -15 minutes to 0 minutes

At the end of the countdown, your instrument is automatically
shifting in chronograph mode and is counting the regatta hours and
the minutes until 99 hours, 59 minutes and 59 seconds.

reading over night

Dial lighthing :

Press briefly on the pusher : the dial will be illuminated for a
period of 3 seconds.



start function

to open the pusher : unscrew
> **never unscrew** the pusher
completely, it is not necessary
and it could damage it.

start function

(unscrewed pusher)

> press **1x** on the pusher.



stop function

> press **2x** on the pusher,
(Why to press 2x : to avoid
any involuntary manipulation
of the pusher, especially if it is
not look-screwed).

reset function

(back to countdown)

> press **1x** on the pusher.

to close the pusher : screw
> **never screw** your pusher
thoroughly, it is not
necessary and this could
damage it.

time setting



Hours setting :

- > press during **3 seconds** on the pusher : the hours will start blinking,
- > press successively on the pusher until the desired hour is set.

Minutes setting :

- > press during **3 seconds** on the pusher : the hours will start blinking,
- > release the pusher and press again during **3 seconds**: the minutes will start blinking,
- > press successively on the pusher until the desired minute is set.

Once your setting is finished, the hours or minutes will continue blinking for a few seconds. When they don't blink anymore, your setting is registered.

catch-up function



catch-up function

- > press **2x** on the pusher,
(Why to press 2 x : to avoid any involuntary manipulation of the pusher during the regatta).

What for is the catch function needed: During the departure signal given at -5 minutes you were busy with a sail at the front and you have activated the countdown a few seconds too late.
> By pressing 2 x on the pusher at the -4 minute signal you will be again perfectly on time !